

MOBAPAD

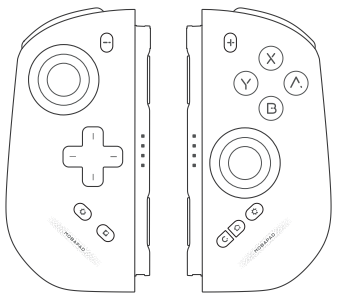


Mobapad M12-Pro Manual

LAYOUT OVERVIEW

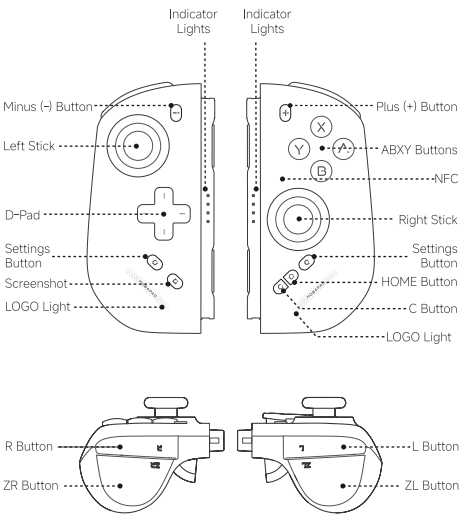

LAYOUT OVERVIEW

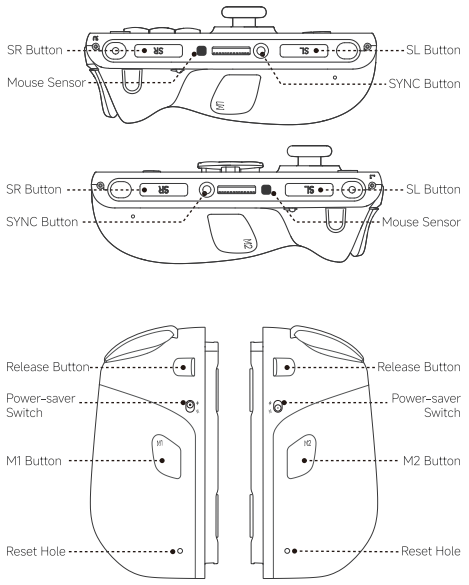

POWER ON AND OFF

Basic Operations

Operation	Instructions
Power On and Pair	With the controller powered off, press and hold the SYNC Button for 3 seconds to power it on and enter Bluetooth pairing mode.
Power On and Reconnect	With the controller powered off, press any button to power it on. The LOGO Light will also turn on.
Power Off	With the controller powered on, press the SYNC Button to power it off immediately.
Power Off with the Console	When the controller is connected to the console, it powers off immediately when the console enters sleep mode or is powered off.

POWER ON AND OFF

Position	
Normal Mode	1. When attached to the Nintendo Switch 2 console, the controllers can draw power from the console. You can set the charging threshold in the MOBAPAD app. 2. When the console enters sleep mode, the controllers stop drawing power from it. 3. When an external power source is connected, both the console and the controllers can charge fully, whether the console is in use or in sleep mode.
Battery-Saving Mode	1. When attached to the Nintendo Switch 2 console while it is in use, the controllers run on their own batteries instead of drawing power from the console, extending the console's battery life. 2. When the console enters sleep mode, the controllers stop drawing power from it. 3. When an external power source is connected, both the console and the controllers can charge fully, whether the console is in use or in sleep mode.

CONNECT AND WAKE UP SWITCH 2

Attaching to the Console

Plug the controller into the Switch2 console for instant connection.

Wireless Connection


1. On your Switch 2 home screen, select the "⚙", then choose Change Grip/Order.
2. Long-press the SYNC Button on the controller until the LED indicators cycle (marquee effect), entering pairing mode.
3. When LED 1 stays lit solid, tap the "⌂" to return to the home screen. The connection is complete.

Wake up to Switch2

After the controller has been successfully paired with your Switch 2, press the "⌂" while both the console and controller are in sleep mode to wake up and reconnect to the console.

NFC FUNCTION

1. The controller has built-in NFC and supports Amiibo accessories.
2. After the controller successfully connects to your Switch2 console, if the game supports Amiibo functionality, hold your Amiibo figure near the NFC area on the right controller to activate the corresponding in-game items.

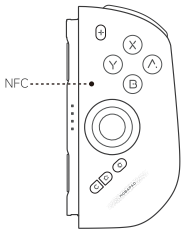

VIBRATION INTENSITY SETTINGS

Vibration Level Toggle	⚙ + ↓ Decrease	The controller will vibrate to confirm the selected intensity level.
	⚙ + ↑ Increase	

TURBO FUNCTION

●Supported Buttons for Turbo: A/B/X/Y/L/R/ZL/ZR/-/+/R3/L3/C/ D-pad Up, Down, Left, Right/Screenshot/M1 (Mapping Mode)/M2 (Mapping Mode)

Manual-turbo: LOGO Light flashes red while the button is pressed.

Auto-turbo: LOGO Light flashes red continuously.

Manual turbo	⚙ + Function button (1st time)	Press to start; release to stop.
Auto Turbo	⚙ + Function button (2nd time)	Press auto-turbo; press again to pause.
Cancel Turbo	⚙ + Function button (3rd time)	Disable turbo for the button.
Turbo Levels	⚙ + Decrease Speed ⚙ + Increase Speed	Low Medium (Default) High
LED Indicators		Low Speed: LOGO Light flashes once. Medium Speed: LOGO Light flashes twice. High Speed: LOGO Light flashes three times.

MACRO PROGRAMMING AND MAPPING

●Supported buttons for macro: A/B/X/Y/L/R/ZL/ZR/L3/R3/-/+/ Screenshot/D-pad: Up, Down, Left, Right, and Joysticks: 8 directions only, no analog input.

●Supported buttons for M1/M2 mapping: A/B/X/Y/L/R/ZL/ZR/L3/ R3/-/+/Screenshot/C/D-pad: Up, Down, Left, Right.

Manual Trigger	1. Enter macro recording: Hold "⚙" for 3 seconds until the LOGO Light turns solid purple. 2. Perform actions to record. 3. Save & Exit Press M1 to save to M1; press M2 to save to M2. The LOGO Light returns to normal. 4. Trigger macro: Short-press M1/M2.
Clear Single Macro	Hold "⚙" for 3 seconds until the LOGO Light turns solid purple, then press M1/M2 to erase its macro.
Macro Auto Loop	Start: Press the "⚙" + M1/M2 Stop: Press the "⚙" + M1/M2 again The LOGO Light flashes purple automatically while macro auto-loop is active.
Button Mapping	Double-press the Settings Button (LOGO Light turns blue). Press the desired button, then M1/M2 to save. The light returns to normal.
Notes	● Only M1/M2/ supports macro auto-loop. ● Any button press stops the macro loop. Reuse the shortcut to restart it. ● Cross-controller mapping and macros are not supported.

SAFETY PRECAUTIONS

- Contains small parts. Keep out of reach of children under 3 years old. If accidentally swallowed or inhaled, seek immediate medical attention.
- Do not use the product near fire or heat sources.
- Do not expose the product to direct sunlight or high-temperature environments.
- Do not place the product in humid or dusty environments.
- Do not impact or drop the product.
- Do not directly touch the USB port, as it may cause a malfunction.
- Do not forcefully bend or pull the cables.
- Clean with a soft, dry cloth.
- Do not use chemicals such as gasoline or thinner for cleaning.
- Do not disassemble, repair, or modify the product yourself.
- Do not use the product for purposes other than its intended design. We are not responsible for accidents or damages caused by improper use.
- Do not look directly at the light beam, as it may harm your eyes.
- If you have any questions or suggestions regarding product quality, please contact Mobapad or your local distributor.

AFTER-SALE SERVICE

Download Mobapad APP

Mobapad Facebook

Mobapad Subreddit

Mobapad Discord

Feel free to reach out to us if you encounter any concerns or issues with the Mobapad controllers.


1-Year Limited Warranty.

Got a problem? We're here to help – just reach out anytime.

Email: service@mobapad.com
Address: C02, 6th Floor, No. 336 Huangpu Avenue Middle, Tianhe District, Guangzhou

MOBAPAD


MOBAPAD 魔派

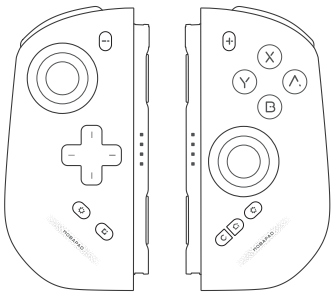


魔派双子星3 M12-Pro

用户手册

产品布局

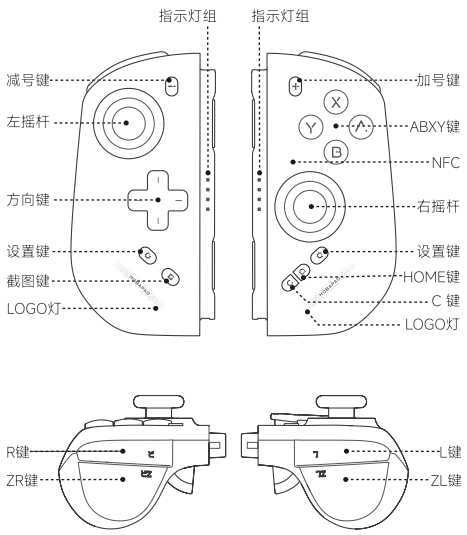

产品布局

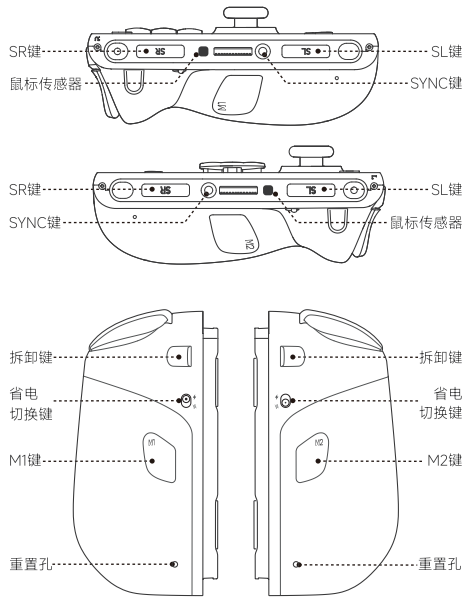

开关机

手柄处于关机状态，长按SYNC键3秒，手柄开机，并进入蓝牙配对状态。
手柄处于关机状态，短按任意按键开机，并进入蓝牙回连状态，同时LOGO灯也同步亮起。
手柄处于开机状态，短按SYNC键，手柄立即关机。
手柄处于连接主机时，主机休眠或关闭主机电源，手柄立即关机。

常规模式/省电模式

档位状态	
常规模式	1.手柄通过有线方式连接NS2主机后，可由主机供电，也可通过APP设置手柄的充电阈值。 2.主机熄屏时，手柄停止从主机取电。 3.无论主机处于亮屏使用还是熄屏状态，连接外接电源后，主机与手柄均可充电至满电。
省电模式	1.手柄通过有线方式连接NS2主机后，在主机亮屏使用时，手柄使用自身电量供电，不消耗主机电量，从而延长主机续航时间。 2.主机熄屏时，手柄停止从主机取电。 3.无论主机处于亮屏使用还是熄屏状态，连接外接电源后，主机与手柄均可充电至满电。


SWITCH设备连接

有线连接:

将手柄插入Switch NS2主机，即可连接。

无线连接:

1.点击Switch NS2 主机界面下方的「 」图标，点击"更改握法/顺序"。
2.长按手柄SYNC键，手柄模式灯组跑马灯律动，进入配对模式。
3.手柄模式灯 LED 1 常亮，此时按「 」返回主界面即可。

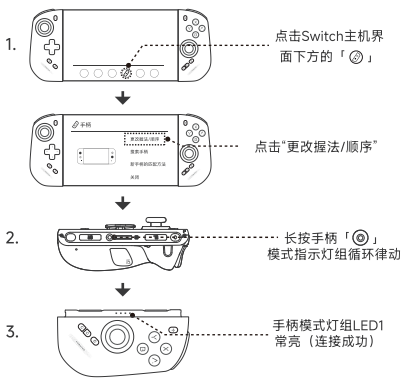

唤醒NS2主机&回连



手柄在成功配对过Switch2主机后，主机和手柄处于休眠时，按下「 」唤醒主机并连接。

NFC功能

1.手柄内置NFC，支持感应Amiibo配件。
2.当Switch主机与手柄连接成功后，如游戏支持Amiibo功能，可使用Amiibo手办，在右手柄NFC处激活游戏中对应道具。



震动档位设置

震动档位切换	+ 降档	按照当前强度震动提示
	+ 升档	

连击功能

●**可以设置连击功能的按键：** A/B/X/Y/L/R/ZL/ZR/-/+/R3/L3/C键/方向键上下左右/截图键/M1（映射状态）/M2（映射状态）

手动连击状态： 按下按键时，手柄 LOGO 红灯闪烁提示

自动连击状态： 自动连击时，手柄 LOGO 红灯自动持续闪烁

手动连击	+功能按键	第一次设置后，按下该功能按键后开启连击，松开停止。
自动连击	+功能按键	第二次设置后，该功能按键，按下后，自动连击，再次按下该功能按键，暂停连击。
取消单键连击	+功能按键	第三次设置后，取消该按键连击功能。
连击档位切换	+ 降档	低档 中档（默认） 高档
	+ 升档	
档位灯光提示		调至低档时：LOGO灯闪1下 调至中档时：LOGO灯闪2下 调至高档时：LOGO灯闪3下

宏编程/按键映射

●**可设置宏编程功能的按键:** A/B/X/Y/L/R/ZL/ZR/L3/R3/-/+/截图键/方向键上下左右/摇杆（摇杆只支持八个方向，不支持模拟量）

●**M1/M2可设置映射功能的按键:** A/B/X/Y/L/R/ZL/ZR/L3/R3/-/+/截图键/C键/方向键上下左右

手动触发	按住「 」键3秒，LOGO灯变成紫色常亮。此时录制操作的按键，录制完毕后，按下M1/M2按键结束录制（用户按下M1键结束，宏记录的操作就会存储在M1键上，按下M2键，则存储到M2键上），设置成功后LOGO灯恢复。
取消单个宏编程按键	按下「 」键3秒，手柄LOGO灯变为紫色常亮，按下需要取消宏定义的背部M1/M2按键，即可单独清除对应按键的自定义设置。
宏循环	按下「 」+M1/M2，开启宏循环， 再次按下「 」+M1/M2，关闭宏循环。 自动宏循环开启后，LOGO紫灯自动闪烁。
映射设置	双击设置键，LOGO灯变为蓝色常亮。 此时按下需要被映射的按键，再按下M1/M2保存，设置成功后LOGO灯恢复。
注意事项	仅M1/M2可开启宏自动循环。 宏循环会被按键操作中断，再次开启组合键宏循环。 M1/M2出厂默认为R/L。 （不支持左右手柄互设宏及映射）

注意事项

●内含细小零件。请务必放在3岁以下儿童触及不到的地方。
若不慎吞食或吸入，请立即就医。
●请勿靠近火源使用产品。
●请勿将产品暴露于阳光直射或高温的环境中。
●请勿将产品置于潮湿或多尘的环境中。
●请勿撞击产品或使其跌落。
●请勿直接接触USB端口，否则可能会导致故障。
●请勿用力弯曲或拉扯线缆。
●请使用柔软的干布清洁。
●请勿使用汽油或稀释剂等化学品。
●请勿自行拆卸、修理或改装。
●请勿将产品用于原本设计用途以外的用途。
对用于非原本用途而造成的事故或损坏，我们概不负责。
●请勿直视光束。它可能会伤害您的眼睛。
●如果您有任何有关产品质量的问题或建议，
请联系我们或您当地的经销商。

售后服务

扫码获取视频教程、
移动端APP下载

我们将为您提供魔派产品的支持与服务：
视频教程、升级工具、电子说明书、FAQ

扫码获取
更多教程

扫码下载
移动端App

1.若商品有质量问题，请优先联系我们的客服进行登记。
联系方式：service@mobapad.com
2.如需退、换商品,请确保商品完好无损(包括商品外包装、附赠品、说明书、售后卡、标签等)，不影响二次销售。
3.如要保修商品，请务必完整填写用户姓名、联系电话和联系地址，并正确填选售后要求、详细说明售后原因，将售后卡随货寄回。

●**保修说明：**

尊敬的用户，您好！

感谢您对"魔派（MOBAPAD）"品牌的信任与支持，我们竭诚为您服务。在质保期内因产品原因造成不能使用的质量问题，经本公司认定，均可享受质保服务。

●**售后信息填写**

产品型号：_____ 产品识别码：_____

购买日期：_____ 订单编号：_____

用户姓名：_____ 联系电话：_____

回邮地址：_____

_____

故障描述：_____

_____